



Olympus Trip 35, fitting new leatherette.

- 1 -

You will need:



- Your camera covered with its original leatherette
- DIY kit
- Soapy water prepared with a little bit of water and a drop of washing-up liquid.



- 2 -

Using the bamboo stick provided, start by removing the old leatherette.

Lift up each corner of the old patch and just peel it off the camera's body.

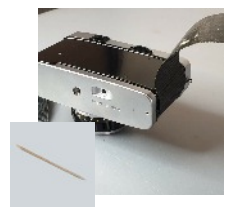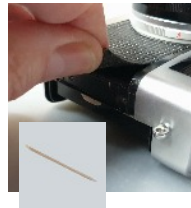



- 3 -

Now the old leatherette has been removed, it is time to thoroughly wipe down the camera with the Alcohol pad to remove any excess of old glue. Use the cotton buds for the intricate spaces. Proceed quickly as the alcohol can evaporate fast!



- 4 -

Detach the new leatherette from its base. **Very important!**: The glue of the new patch can be very sticky. To give you time to position it correctly, apply a small amount of soapy water with a brush (or the tip of your finger) on the patch. When it is correctly positioned, wait about 20 minutes or so for the water to evaporate and press the new leatherette with your fingers to fix it.

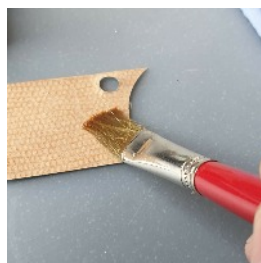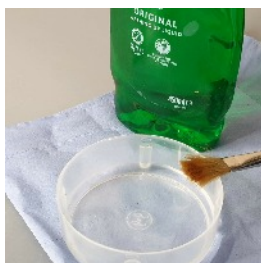

ALL DONE! ENJOY YOUR NEW STYLISH TRIP 35!